




# Microwave Oven

Owner's Instructions & Cooking Guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.



This manual is made with 100 % recycled paper.

# imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register





# contents

Safety information2
Quick look-up guide13
Oven features14
Oven
Control panel
Accessories
Oven use
How a microwave oven works
Checking that your oven is operating correctly
Setting the time
Cooking/Reheating17
Power levels18
Adjusting the cooking time18
Stopping the cooking18
Setting the energy save mode18
Using the steam cleaning
(Only MG23H3125B*, MG23H3125N*, MG23H3125P*, MG23H3125X* models)19
Using the sensor cook features19
Using the healthy cooking features21
Using the auto power defrost features23
Using the my plate features24
Choosing the accessories24
Grilling25
Combining microwaves and the grill25
Power steam cooking guide
(Only MG23H3125F*, MG23H3125J*, MG23H3125P*, MG23H3125X* models)26
Using the crusty plate
(Only MG23H3125C*, MG23H3125J*, MG23H3125N*, MG23H3125X* models)27
Switching the beeper off29
Safety-locking your microwave oven29
Cookware guide29
Cooking guide30
Troubleshooting and error code38
Troubleshooting
Error code
Technical specifications39

# safety information

### **USING THIS INSTRUCTION BOOKLET**

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- · Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

# **LEGEND FOR SYMBOLS AND ICONS**

MARNING.

Hazards or unsafe practices that may result in **severe personal injury or death**.

<u>/!\</u> CAUTION Hazards or unsafe practices that may result in **minor personal injury or property damage**.

Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Do NOT touch.



Do NOT disassemble.



Follow directions explicitly.



Unplug the power plug from the wall socket.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note

Important

English - 2

# IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

# ▲ WARNING (Microwave function only)

- WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- This appliance is intended to be used in household only.

- the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- warning: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plasitic or paper containers, keep an eye on the oven due to the possibility of ignitions.

English - 3

- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- warning: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- warning: The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposites removed.

- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING: Liquids or other foods must not be heated in sealed containers since they are liable to explode;

English - 4

- The appliance should not be cleaned with a water jet.
- This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
- If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- The microwave oven has to be positioned so that plug is accessible.
- The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

# ▲ WARNING (Oven function only) - Optional

warning: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- WARNING: Accessible parts may become hot during use. Young children should be kept away.
- A steam cleaner is not to be used.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- warning: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

  Children less than 8 years of age shall
  - Children less than 8 years of age shall be kept away unless continuously supervised.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The door or the outer surface may get hot when the appliance is operating.
- Keep the appliance and its cord out of reach of children less than 8 years.

English - 5

- This appliance can be used by children aged from 8 years and above and persons with reduced physical. sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radiofrequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and

EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

# **INSTALLING YOUR MICROWAVE OVEN**

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safety bear the weight of the oven.

**1.**When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the



- oven and 20 cm (8 inches) of space above. **2.**Remove all packing materials inside the oven.
- **3.** Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)
- **4.**This microwave oven has to be positioned so that plug is accessible.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. For your personal safety, plug the cable into a proper AC earthed socket.
- Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

# **CLEANING YOUR MICROWAVE OVEN**

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)
- ALWAYS ensure that the door seals are clean and the door closes properly.

- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- **1.**Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
- **2.**Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
- **3.**To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
- **4.**Wash the dishwasher-safe plate whenever necessary.
- **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
  - Accumulate
  - Prevent the door from closing correctly

English - 7

MG23H3125NK EU DE68-04240A-00 EN.indd 7

Clean the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



# STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

■ NEVER remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre
- If you wish to store your oven away temporarily, choose a dry, dustfree place.
  Reason: Dust and damp may adversely affect the working parts in the oven.
- This microwave oven is not intended for commercial use.
- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

A	WARNING	Δ	À	▲	<u>k</u>
X	Only qualified staff should be allowed to modify or repair the appliance.	~	<b>~</b>	<b>~</b>	<b>✓</b>
	Do not heat liquids and other food in sealed containers for microwave function.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>
	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>
	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	~	<b>✓</b>	<b>✓</b>	<b>✓</b>
	This appliance must be properly grounded in accordance with local and national codes.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>

English - 8

*	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	<b>✓</b>	<b>✓</b>	<b>✓</b>	~
	Do not pull or excessively bend or place heavy objecton the power cord.	<b>✓</b>	<b>~</b>	<b>~</b>	<b>~</b>
*	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	<b>✓</b>	<b>√</b>	<b>√</b>	<b>✓</b>
8	Do not touch the power plug with wet hands.	<b>~</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>
*	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	<b>~</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
	Do not apply excessive pressure or impact to the appliance.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>
	Do not place the oven over a fragile object such as a sink or glass object.	<b>✓</b>	<b>~</b>		
	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>
	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	<b>✓</b>	<b>√</b>		<b>√</b>
	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	<b>✓</b>	<b>√</b>	<b>✓</b>	
	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	<b>✓</b>	<b>✓</b>	<b>✓</b>	

	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	~	<b>~</b>	<b>~</b>	<b>~</b>
	Do not pour or directly spray water onto the oven.	<b>~</b>	<b>✓</b>		
	Do not place objects on the oven, inside or on the door of the oven.	~	<b>~</b>	<b>~</b>	
	Do not spray volatile material such as insecticide onto the surface of the oven.	<b>~</b>	<b>~</b>		
	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	<b>~</b>		<b>✓</b>	<b>✓</b>
*	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
*	warning: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions:  Immerse the scalded area in cold water for at least 10 minutes.  Cover with a clean, dry dressing.  Do not apply any creams, oils or lotions.	~	<b>~</b>	<b>~</b>	<b>&gt;</b>
	Do not put the tray or rack in water shortly after cooking because it may cause breakage or damage of the tray or rack.				<b>✓</b>

English - 9

	Do not operate the microwave oven for deep fat frying because the oil temperature cannot be	<b>✓</b>		<b>✓</b>
	controlled.			
	This could result in a sudden boil over of the hot			
	liquid.			

A	CAUTION	Δ	A	À	Æ
*	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc.  Remove wire twist ties from paper or plastic bags.  Reason: Electric arcing or sparking may occur and may damage the oven.	<b>✓</b>		<b>&gt;</b>	>
	Do not use your microwave oven to dry papers or clothes.	<b>√</b>		<b>~</b>	<b>~</b>
*	Use shorter times for smaller amounts of food to prevent overheating and burning food.	<b>✓</b>		>	>
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	<b>✓</b>	<b>~</b>		
	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.			<b>~</b>	<b>&gt;</b>
	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	~		<b>✓</b>	
8	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			<b>✓</b>	

*	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			<b>~</b>	
*	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			<b>&gt;</b>	
	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	<b>✓</b>			<b>✓</b>
*	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	<b>✓</b>		<b>✓</b>	
*	Take care when connecting other electrical appliances to sockets near the oven.	<b>√</b>	<b>✓</b>	<b>✓</b>	

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY. (MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
  - (1) door (bent)
  - (2) door hinges (broken or loose)
  - (3) door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

English - 10

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- (a) A Dented. Scratched. or Broken Door, Handle, Out-Panel, or Control Panel.
- (b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.
- Use this appliance only for its intended purpose as described in this
  instruction manual. Warnings and Important Safety Instructions in this
  manual do not cover all possible conditions and situations that may occur.
  It is your responsibility to use common sense, caution, and care when
  installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.



# CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

### (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

### **INSTALLATION & WIRING INSTRUCTIONS**

#### **IMPORTANT NOTE:**

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse.

The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS1363 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug.

Replacement covers are available from your Dealer. If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your Dealer for assistance. However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.

### WIRING INSTRUCTIONS

### WARNING THIS APPLIANCE MUST BE EARTHED.

This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock providing an escape wire for the electric current. The appliance is equipped with a mains lead which includes an earth wire for connecting to the earth terminal of your mains plug. The plug must be plugged into a socket that is properly installed and earthed.

The wires in this mains lead are coloured in accordance with the following code:

• Green and yellow: Earth

Blue : NeutralBrown : Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings indentifying the terminals in your plug, proceed as follows.

Connect the green and yellow wire to the terminal in the plug marked with the letter E or the earth symbol ( $\pm$ ) or coloured green or green-and-yellow.

English - 11

Connect the blue wire to the terminal marked with the letter N or coloured black.



Consult a qualified electrician or service technician if in doubt about any of these instructions.

The manufacturer of this oven will not accept any liability for damage to persons or material for non observance of these requirements.


There are no user-serviceable parts inside the oven and if the mains lead of this appliance is damaged, it must only be replaced by qualified service personnel approved by the manufacturer because special tools are required.

**WARNING:** Ensure that the plug and WARNING power cord are not damaged before use. If you have any reason to remove the moulded plug from this appliance,

immediately remove the fuse and dispose of the plug.

Do not connect the plug to a mains socket under any circumstances as there is a danger of electric shock.

CIRCUITS: Your microwave oven should WARNING be operated on a separate circuit from other appliances. Failure to do this may cause the circuit breaker to trip, the fuse to blow, or the food to cook more slowly.

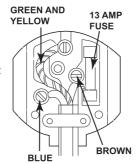

### COOKING INSTRUCTIONS ON FOOD PACKAGING

### Microwave Symbols

On the front of your oven there is a microwave oven symbol, as shown helow.

This symbol has been introduced for your benefit when cooking or reheating packaged food.



Packaged food is also, increasingly, using a microwave symbol similar to the one below. When you see this



Symbol on food packaging, the cooking instructions are based on either the IEC Power Output Rating, or the Reheating Categories A. B. C. D or E.

### **COOKING INSTRUCTIONS**

The IEC Power Output rating is an internationally standardised rating, so all microwave manufacturers now use the same method of measuring power output.

If food packaging gives cooking instructions based on IEC Power ratings, set cooking times according to the IEC Power of your oven.

## For example:

If the cooking instructions are based on a 650 W oven, then you will need to reduce some cooking time for the MG23H3125\*\* (800 W).

Ready meals are now very convenient and popular. These are meals which are already prepared and cooked by the food manufacturer, and then frozen, chilled or vacuum sealed for long life.

Increasingly, heating times for such ready meals are being based on the Heating Categories A, B, C, D and E.

On this instance, simply match the heating category of your oven to the instructions on the food package, and set your timer accordingly.

### For example:

If the heating instructions are 3 minutes on HIGH for a D category oven, then you will need to set your timer for less than 3 minutes on HIGH for the MG23H3125\*\* (E category).

Always remember that cooking instructions are intended only as a guide. If you have followed the instructions and the food is still not piping hot throughout, simply return it to the oven and cook it until it is.

# quick look-up quide

## If you want to cook some food.


Microwave	1.	Place the food in the oven.  Press the <b>Microwave</b> button to start cooking.		
- (-1)+ - (-1)+	2.	Turn <b>Dial Knob</b> to desired until the appropriate power level is displayed. At that time, press the <b>Dial Knob</b> to set the power level.		
- (in/d)	3.	Set the cooking time by turning the <b>Dial Knob</b> .		
♦ /+30s START	4.	Press the <b>START/+30s</b> button.  Result: Cooking starts. The oven beeps 4 times when cooking is over.		

### If you want to auto Power defrost some food.

** OÖ Power Defrost	1.	Place the frozen food in the oven. Press the <b>Power Defrost</b> button.
	2.	Set the cooking category by turning the <b>Dial Knob</b> . Press <b>Dial Knob</b> to set desired.
- (Pη/♥) +	3.	Select the weight by turning the <b>Dial Knob</b> as required.
√+30s START	4.	Press the <b>START/+30s</b> button.

English - 13

# If you want to add extra 30 seconds.




# If you want to grill some food.



# oven features

# OVEN

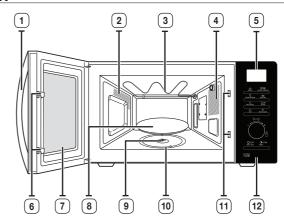


- 1. DOOR HANDLE
- 2. VENTILATION HOLES
- 3. GRILL
- 4. LIGHT
- 5. DISPLAY
- 6. DOOR LATCHES

- **7.** DOOR
- 8. TURNTABLE
- 9. COUPLER
- 10. ROLLER RING
- 11. SAFETY INTERLOCK HOLES
- 12. CONTROL PANEL

English - 14

# **CONTROL PANEL**

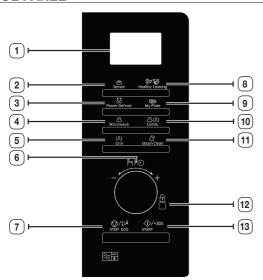

- 1. DISPLAY
- 2. SENSOR COOK BUTTON
- 3. POWER DEFROST BUTTON
- 4. MICROWAVE BUTTON
- 5. GRILL BUTTON
- **6.** DIAL KNOB (WEIGHT/SERVING/TIME/SELECT)

- 7. STOP/ECO BUTTON
- 8. HEALTHY COOKING BUTTON
- 9. MY PLATE BUTTON
- 10. COMBI BUTTON
- 11. STEAM CLEAN BUTTON
- 12. CHILD LOCK BUTTON
- 13. START/+30s BUTTON

# **ACCESSORIES**

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	Roller ring, to be placed in the centre of the oven.     Purpose: The roller ring supports the turntable.
( \$0 )	2. Turntable, to be placed on the roller ring with the centre fitting to the coupler.  Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.
	3. Grill rack, to be placed on the turntable.  Purpose: The metal rack can be used in grill and combination cooking.
	4. Crusty plate, see page 27 to 28.  (Only MG23H3125C*, MG23H3125J*, MG23H3125N*, MG23H3125X* models)  Purpose:  The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.
	5. Clean water bowl, see page 19. (Only MG23H3125B*, MG23H3125N*, MG23H3125P*, MG23H3125X* models) Purpose: The water bowl can be used to clean.
	6. Steam cooker, see page 26 to 27. (Only MG23H3125F*, MG23H3125J*, MG23H3125P*, MG23H3125X* models)  Purpose: The plastic steam cooker when using power steam function.

**DO NOT** operate the microwave oven without the roller ring and turntable.

English - 15

# DO NOT operate the GRILL and COMBI mode with steam cooker.

Operation Mode	MW	GRILL	COMBI
(Steam cooker)	0	X	X

# oven use


# **HOW A MICROWAVE OVEN WORKS**

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without the foods form or colour changing.

You can use your microwave oven to:

- Defrost (manual & auto)
- Cook
- Reheat

# Cooking Principle.

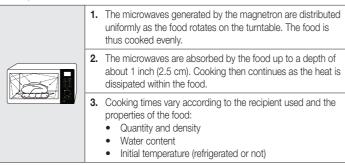

- As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:
  - Even cooking of the food right to the centre.
  - The same temperature throughout the food.

# CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times

Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Then, close the door.

Microwave	1. Press the Microwave button.  Result: The 800 W (maximum cooking power) indications are displayed
→	2. After press the <b>Dial Knob</b> (800 W), set the time 4 to 5 minutes by turning the <b>Dial Knob</b> and press the <b>START/+30s</b> button.  Result: The oven light comes on and the turntable starts rotating.  1) Cooking starts and when it has finished the oven beeps 4 times.  2) The end reminder signal will beep 3 times (once every minute).  3) The current time is displayed again.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum is used, the water takes longer to boil.


English - 16

# **SETTING THE TIME**

Your microwave oven has an inbuilt clock. When power is supplied, ":0", "88:88" or "12:00" is automatically displayed on the display.

Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure
- Do not forget to reset the clock when you switch to and from summer and winter time.

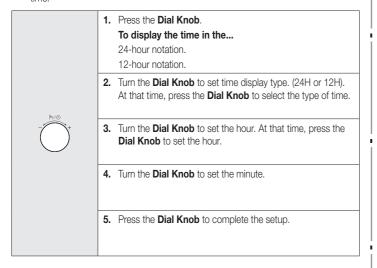

### **COOKING/REHEATING**

The following procedure explains how to cook or reheat food. ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

Microwave	1.	Press the <b>Microwave</b> button.  Result: The 800 W (maximum cooking power) indications are displayed:	
	2.	Turn <b>Dial Knob</b> to desired until the appropriate power level is displayed. At that time, press the <b>Dial Knob</b> to set the power level.	
- (hη/⊙) +	3.	Set the cooking time by turning the <b>Dial Knob</b> .  Result: The cooking time is displayed.	
(♣)/+30s START	4.	Press the START/+30s button.  Result: The oven light comes on and the turntable starts rotating.  1) Cooking starts and when it has finished the oven beeps 4 times.  2) The end reminder signal will beep 3 times (once every minute).  3) The current time is displayed again.	

Never switch the microwave oven on when it is empty.

If you wish to heat a dish for a short period of time at maximum power (800 W), simply press the START/+30s button once for each 30 seconds of cooking time. The oven starts immediately.

English - 17

### **POWER LEVELS**

You can choose among the power levels below.

Power level	Output			
Power level	MWO	GRILL		
HIGH	800 W	-		
MEDIUM HIGH	600 W	-		
MEDIUM	450 W	-		
MEDIUM LOW	300 W	-		
DEFROST	180 W	-		
LOW/KEEP WARM	100 W	-		
GRILL	-	1100 W		
COMBII	600 W	1100 W		
COMBI II	450 W	1100 W		
COMBI III	300 W	1100 W		

- If you select higher power level, the cooking time must be decreased.
- If you select lower power level, the cooking time must be increased.

# ADJUSTING THE COOKING TIME

√/+30s START	You can increase the cooking time by pressing the <b>START/+30s</b> button once for each 30 seconds to be added.
- (F <sub>17</sub> /2)	You can also increase the cooking time by turning <b>Dial Knob</b> once for each 10 sec to be added.

### STOPPING THE COOKING

You can stop cooking at any time to check the food.



- 1. To stop temporarily;
  - 1) Open the door.

Result: Cooking stops. To resume cooking, close the door and press **START/+30s** button again.

2) Press the STOP/ECO button.

**Result:** Cooking stops. To resume cooking, press

START/+30s button again.



2. To stop completely;

Press the **STOP/ECO** button.

**Result:** The cooking stops. If you wish to cancel the

cooking settings, press the STOP/ECO button

again.

you can also cancel any setting before starting by simply pressing **STOP/ECO** button.

## SETTING THE ENERGY SAVE MODE

The oven has an energy save mode. This facility saves electricity when the oven is not in use. Normal condition is standby mode and show clock when not using.



- Press the STOP/ECO button.
  - Result: Display off.
- To remove energy save mode, open the door or press the STOP/ECO button and then display shows current time.
   The oven is ready for use.

# (V) Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.

Oven Lamp will be turned off after 5 minutes with door open condition.

# USING THE STEAM CLEANING (ONLY MG23H3125B\*, MG23H3125N\*, MG23H3125P\*, MG23H3125X\* MODELS)

The steam provided by steam clean system will soak the cavity surface. After using steam clean function, you can easily clean the cavity of oven.

Use this function only after the oven has completely cooled. (Room temperature)

Use normal water only, and no distilled water.



1. Open the Door.



2. Fill with water following guide line (water level) outside the water bowl. (The line is about 50 ml.)



Insert water bowl into upper water bowl holder on the right wall of cooking chamber. At that time close the door.



4. Press the Steam Clean button, than it will start automatically. (You cannot adjust cleaning time, the cleaning time is set as 15min.) It can be seen MISTY during steam cleaning. but it is not a defect BUT STEAM SHIELDS THE LIGHT INSIDE.



Open the door and please clean cavity of oven with dried dishtowel. Remove the turntable and only under rack with kitchen paper.



Water Bowl only can be use during "Steam Clean" mode.

When cooking non-liquid items, remove water bowl because It will damage and cause fire to the microwave oven.





More than 50 ml water may cause a leak at the back through the hole. Ensure that it is not more than 50 ml.

# **USING THE SENSOR COOK FEATURES**

The Sensor Cook Features has Seven pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the Sensor Cook category by turning the dial knob.

First, place the food in the center of the turntable and close the door.



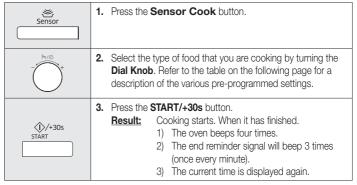

Use only recipients that are microwave-safe.

English - 19

Code/Food	Serving Size	Instructions
1 Broccoli Florets	200-500 g	Wash and clean broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for broccoli as well as courgette, egg plant, pumpkin or pepper. Stand for 1-2 minutes.
2 Sliced Carrots	200-500 g	Wash and clean carrots and cut into round slices evenly. Put them into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for carrots as well as cauliflower florets or turnip cabbage. Stand for 1-2 minutes.
3 Peeled Potatoes	200-800 g	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.
4 Chilled Soup	250-500 g	Pour into a deep ceramic plate or bowl and cover with plastic lid during heating. Put soup in the centre of turntable. Stir carefully before and after standing time. Stand for 2-3 minutes.
5 Frozen Soup	250-500 g	Pierce film of frozen soup and put in the centre of turntable. Put soup in the centre of turntable. Stir carefully before and after standing time. Stand for 2-3 minutes.
6 Frozen Ready Meal	300-500 g	Check if dish is suitable for microwave. Pierce film of ready meal. Put the frozen ready meal on the rack. Stand for 2-3 minutes.  This programme is suitable for frozen ready meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).

Code/Food	Serving Size	Instructions
7	200-400 g	Place frozen pizza on a crusty plate and put on the turntable. Do not cover with lid or plastic wrap.
Frozen Pizza		Stand for 1-2 minutes.

Use oven gloves while taking out!

# **Auto Sensor Cooking Instructions**

The Auto Sensor allows you to cook your food automatically by detecting the amount of gases generated from the food while cooking.

- When cooking food, many kinds of gases are generated. The Auto Sensor determines the proper time and power level by detecting these gases from the food, eliminating the need to set the cooking time and power level.
- When you cover a container with its lid or plastic wrap during Sensor Cooking, the Auto Sensor will detect the gases generated after the container has been saturated with steam

If using cling film or plastic wrap be sure to leave a small opening near the edge of dish for ventilation or be sure to pierce at several times.

- Shortly before cooking ends, the remaining cooking time will begin its count down.
   This will be a good time for you to rotate or stir the food for even cooking if it is necessary.
  - Before auto sensor cooking food may be seasoned with herbs, spices or browning sauces. A word of caution though, salt or sugar may cause burn spots on food so these ingredients should be added after cooking.
  - To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
  - Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

English - 20

# **Utensils & Cover For Sensor Cooking**

- To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
- Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- · Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

# **Important**

- After installing the oven and plugging into an electrical outlet, do not unplug the power cord. The gas sensor needs time to stabilize in order to cook satisfactorily.
- It its not advisable to use the auto sensor cooking feature on a continuous cooking operation, i.e. one cooking operation immediately after another.
- Install the oven in a well ventilated location for proper cooling and airflow and to ensure the sensor will operate accurately.
- To avoid poor results, do not use the Auto sensor when the room ambient temperature is too high or too low.
- Do not use volatile detergent to clean your oven. Gas resulting from this detergent may affect the sensor.
- Avoid placing the oven near high moisture or gas emitting appliances, since this will interfere with the proper performance of the Auto Sensor.
- Always keep the inside of the oven clean. Wipe all spills with a damp cloth. This oven is designed for household use only.

## **USING THE HEALTHY COOKING FEATURES**

The Healthy Cooking Features has Seventeen pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the serving size of the item by turning the dial knob.

First, place the food in the centre of the turntable and close the door.

Healthy Cooking	1.	Press the <b>Healthy Cooking</b> button.	
- <sup>□</sup> †	2.	Select the category that you are cooking by turning the <b>Dial Knob</b> . At that time, press the <b>Dial Knob</b> .  And then, select the food that you are cooking by turning the <b>Dial Knob</b> . Refer to the table on the following page for a description of the various pre-programmed settings.	
⟨ <b>\</b> ⟩/+30s START	3.	Press the START/+30s button.  Result: Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.	

Use only recipients that are microwave-safe.

# 1. Vegetables & Grain

Code/Food	Serving Size	Instructions
1-1 Green Beans	250 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-2 Spinach	150 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.

(continued)

English - 21

Code/Food	Serving Size	Instructions
1-3 Corn on the Cob	250 g (1 pcs)	Rinse and clean corn on the cob and put into an oval glass dish. Cover with microwave cling film and pierce film. Stand for 1-2 minutes.
1-4 Brown Rice (Parboiled)	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
1-5 Wholemeal Macaroni	125 g	Use a large glass ovenware dish with lid. Add 500 ml hot boiling water, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
1-6 Quinoa	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
1-7 Bulgur	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 2-5 minutes.
1-8 Vegetable Gratin	500 g	Put the vegetables, such as precooked potato slices, courgette slices and tomatoes and sauce into a suitable sized glass pyrex dish. Add grated cheese on top. Put dish on the rack. Stand for 2-3 minutes.
1-9 Grilled Tomatoes	400 g	Rinse and clean tomatoes, cut them into halves and put in an ovenware dish. Add grated cheese on top. Put dish on rack. Stand for 1-2 minutes.

# 2. Poultry & Fish

Code/Food	Serving Size	Instructions
2-1 Chicken Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2-2 Turkey Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2-3 Fresh Fish Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-4 Fresh Salmon Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-5 Fresh Prawns	250 g	Rinse prawns on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-6 Fresh Trout	200 g (1 fish)	Put 1 fresh whole fish into an ovenproof dish. Add a pinch salt, 1 tbsp lemon juice and herbs. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2-7 Roast Fish	200 g (1 fish)	Brush skin of whole fish (trout or gilthead) with oil and add herbs and spices. Put fish side by side, head to tail on the high rack. Turnover, as soon as the beep sounds. Stand for 3 minutes.
2-8 Grilled Salmon Steaks	300 g (2 steaks)	Put fish steaks evenly on the high rack. Turnover, as soon as the beep sounds. Stand for 2 minutes.

English - 22

# **USING THE AUTO POWER DEFROST FEATURES**

The Auto Power Defrost features enables you to defrost meat, poultry, fish and bread/cake. The defrost time and power level are set automatically.

You simply select the programme and the weight.

First, place the frozen food in the centre of the turntable and close the door.

** OÖ Power Defrost	1. Press the <b>Power Defrost</b> button.
- (Fa/√⊙ +	2. Select the type of food that you are cooking by turning the <b>Dial Knob</b> . (Refer to the table on the side).
	3. Press the <b>Dial Knob</b> to select the type of food.
	4. Set the weight of food by turning the <b>Dial Knob</b> .
√/+30s START	<ul> <li>Fress the START/+30s button.         Result:</li></ul>

You can also defrost food manually. To do so, select the microwave cooking/ reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 17 for further details.

Use only dishes that are microwave-safe.

The following table presents the various Auto power Defrost programmes, quantities and appropriate instructions. Remove all kinds of package material before defrosting. Place meat, poultry, fish, bread/cake on a ceramic plate.

Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat. Stand for 10-30 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil.  Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions. Stand for 10-30 minutes.
3 Fish	200-1500 g	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets. Stand for 10-30 minutes.
4 Bread/Cake	125-625 g	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 5-30 minutes.

Select the Manual Defrosting function with a power level of 180 W if you want to defrost food manually. For further details on manual defrosting and defrosting time, refer to the page 34-35.

English - 23

# **USING THE MY PLATE FEATURES**

The My Plate features has 2 pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the number of servings by turning the dial knob. First, place the food in the centre of the turntable and close the door.

My Plate	1.	Press the <b>My plate</b> button.	
- (Fa/√⊙ +	2.	Select the type of food that you are cooking by turning the <b>Dial Knob</b> .	
	3.	Press the <b>Dial Knob</b> to select the type of food.	
- (iη/⊘) +	4.	Select the size of the serving by turning the <b>Dial Knob</b> . (Refer to the table on the side.)	
<b></b>	5.	Press the START/+30s button.  Result:  Cooking starts. When it has finished.  1) The oven beeps 4 times.  2) The end reminder signal will beep 3 times (once every minute).  3) The current time is displayed again.	

Use only recipients that are microwave-safe.

The following table presents the My Plate auto reheat programmes, quantities and appropriate instructions. Those programmes are running with microwave energy only.

Code/Food	Serving Size	Instructions
1 Chilled Ready Meal	300-350 g 400-450 g	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dishes like potatoes, rice or pasta). Stand for 2-3 minutes.
2 Chilled Vegetarian Meal	300-350 g 400-450 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 2 components (e.g. spaghetti with sauce or rice with vegetables). Stand for 2-3 minutes.

# **CHOOSING THE ACCESSORIES**



Use microwave-safe recipients; do not use plastic containers, dishes, paper cups, towels, etc.

If you wish to select the combined cooking mode (grill and microwave), use only dishes that are microwave-safe and ovenproof.



For further details on suitable cookware and utensils, refer to the Cookware Guide on page 29-30.

English - 24

### **GRILLING**

The grill enables you to heat and brown food quickly, without using microwaves. For this purpose, a grill rack is supplied with your microwave oven.


U Grill →	1.	Preheat the grill to the required temperature, by pressing the <b>Grill</b> button and set the preheat time by turning the <b>Dial Knob</b> .		
√)/+30s START	2.	Press the <b>START/+30s</b> button.		
	3.	After preheating, open the door and place the food on the rack.  Close the door.		
W Grill	4.	Press the <b>Grill</b> button.  Result: The following indications are displayed:		
- (iη/⊘)+	5.	Set the Grilling time by turning the <b>Dial Knob</b> . The maximum grilling time is 60 minutes.		
√/+30s START	6.	Press the START/+30s button.  Result: Grilling cooking start. When it has finished.  1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute).  3) The current time is displayed again.		

- Do not worry if the heater turns off and on while grilling.
  This system is designed to prevent overheating of the oven.
- Always use oven gloves when touching the dishes in the oven, as they will be very hot.
- You cannot set the temperature of the grill.

## COMBINING MICROWAVES AND THE GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

- **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.

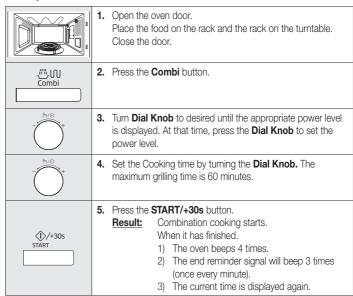

- The maximum microwave power for the combined microwave and grill mode is 600 W.
- You cannot set the temperature of the combi.

# POWER STEAM COOKING GUIDE (ONLY MG23H3125F\*, MG23H3125J\*, MG23H3125P\*, MG23H3125X\* MODELS)

The Power Steamer is based on the principle of steam cooking, and is designed for fast, healthy cooking in your Samsung Microwave oven.

This accessory is ideal for cooking rice, pasta, vegetables, etc. in record time, while preserving their nutritional values.

The Microwave Power steamer set is made up of 3 items:







Bowl

Insert tray

Lid

All parts withstand temperatures from -20 °C to 140 °C. Suitable for freezer storage. Can also be used separately or together.

### CONDITIONS of USE:



- to cook foods with a high sugar or fat content,
- with the grill or rotating heat function or on a hob.
- Wash all parts well in soapy water before first use.

# **MAINTENANCE:**

- Your steamer can be washed in a dishwasher.
- When washing by hand, use hot water and washing-up liquid. Do not use abrasive pads.
- Some foods (such as tomato) may discolour the plastic. This is normal and not a manufacturing fault.

### **COOKING:**

Food	Serving Size	Power levels	Cooking time (min.)	Handling		
Artichokes	300 g (1-2 pcs)	800 W	5-6	Bowl with insert tray + Lid		
		clean artich on tray. Ad		tray into bowl. Set juice. Cover with lid. Stand		
Fresh	300 g	800 W	4-5	Bowl with insert tray + Lid		
Vegetables	after washi	vegetables ng, cleanin bute veget	g and cutting in	auliflower, carrots, pepper) to similar size. Put tray into cray. Add 2 tbsp water.		
Frozen	300 g	600 W	7-8	Bowl with insert tray + Lid		
Vegetables		en vegetal 1 tbsp wat	er. Cover with lic	am bowl. Put insert tray into d. Stir well after cooking and		
Rice	250 g	800 W	15-18	Bowl + Lid		
	Instructions Put rice into the steam bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice 5 minutes, brown rice 10 minutes.					
Jacket	500 g	500 g   800 W   7-8   Bowl + Lid				
Potatoes	Instructions Weigh and rinse the potatoes and put them into steam bowl. Add 3 tbsp water. Cover with lid. Stand for 2-3 minutes.					
Stew (Chilled)	400 g 600 W 5-6 Bowl + Lid					
	Instructions Put stew into the steam bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.					

(continued)

English - 26

Food	Serving Size	Power levels	Cooking time (min.)	Handling
Soup (Chilled)	400 g	800 W	3-4	Bowl + Lid
	Instruction			
	Pour into st Stand for 1			Stir well before standing.
Frozen Soup	400 g	800 W	8-10	Bowl + Lid
	Instructions Put frozen soup into steam bowl. Cover with lid. Stir well before standing. Stand for 2-3 minutes.			
Frozen Yeast	150 g	600 W	1-2	Bowl + Lid
Dumpling with Jam Filling	Instructions  Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the steam bowl. Cover with lid. Stand for 2-3 minutes.			
Fruit Compote	250 g	800 W	3-4	Bowl + Lid
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 tbsp water and 1-2 tbsp. sugar. Cover with lid. Stand for 2-3 minutes.			

# Handling of power steam cooker







Bowl + Lid


Bowl with insert tray + Lid

# **PRECAUTIONS:**

- Take special care when opening the lid of your steamer, because the steam escaping may be very hot.
- Use oven gloves when handling after cooking.

# USING THE CRUSTY PLATE (ONLY MG23H3125C\*, MG23H3125J\*, MG23H3125N\*, MG23H3125X\* MODELS)

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

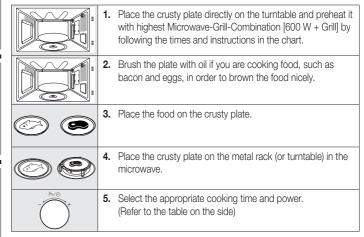

- Always use oven gloves to take out the crusty plate, as will become very hot.
- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Do not place any objects on the crusty plate that are not heat-resistant.
- Never place the crusty plate in the oven without turntable.
- Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.
- Please note that the crust plate is not dish washer-safe.

# English - 27

We recommend to preheat the crusty plate directly on the turntable. Preheat crusty plate with 600~W+Grill function for 3-4 minutes. Follow the times and instructions in the table.

Food	Serving Size	Power	Cooking time (min.)		
Bacon	4 slices (80 g)	3½-4			
	Instructions				
		Put slices side by side ack. Stand for 3 minute			
Grilled Tomatoes	200 g (2 pcs)	450 W + Grill	4½-5		
		Cut tomatoes in halve circle on crusty plate. F minutes.			
Burger (Frozen)	2 pieces (125 g)	600 W + Grill	7-71/2		
	Preheat crusty plate.	Instructions Preheat crusty plate. Put frozen burger in a circle on crusty plate. Put crusty plate on the rack. Turn over after 4-5 min. Stand for 3 minutes.			
Baguettes	200-250 g (2 pcs)	450 W + Grill	8-9		
(Frozen)	Instructions Preheat crusty plate. Put 1 baguette beside the centre, 2 baguettes side by side on the plate. Put crusty plate on rack. Stand for 4 minutes.				
Pizza (Frozen)	300-350 g	450 W + Grill	71/2-81/2		
	Instructions Preheat crusty plate. Put the frozen pizza on the crusty plate. Put crusty plate on the Turntable. Stand for 2 minutes.				
Baked Potatoes	250 g 600 W + Grill 5-6 500 g 8-9				
	Instructions Preheat crusty plate. Cut potatoes in halves. Put them on the crusty plate with the cut side to the bottom. Arrange in a circle. Put the plate on the rack. Stand for 3 minutes.				

Food	Serving Size	Power	Cooking time (min.)	
Fish Fingers (Frozen)	150 g (5 pcs) 300 g (10 pcs)	600 W + Grill	7-8 9-10	
	Instructions Preheat crusty plate. Brush plate with 1 tbsp. oil. Put fish fingers in a circle on the plate. Turn over after 4 min. (5 pc) or after 6 min. (10 pc). Stand for 4 minutes.			
Chicken Nuggets (Frozen)	125 g 600 W + Grill 5-5½ 250 g 600 W + Grill 7½-8			
	Instructions Preheat crusty plate. Brush plate with 1 tbsp. Put chicken nuggets on the plate. Put crusty plate on the rack. Turn over after 3 min. (125 g) or 5 min. (250 g). Stand for 4 minutes.			
Pizza (Chilled)	300-350 g 450 W + Grill 6½-7½			
	Instructions Preheat crust plate. Put the chilled pizza on the plate. Put crust plate on the Turntable. Stand for 4 minutes.			

English - 28

# **SWITCHING THE BEEPER OFF**

You can switch the beeper off whenever you want.

©/fpA	<ul> <li>Press the STOP/ECO and START/+30s buttons at the same time.</li> <li>Result:  • The following indication is displayed.</li> <li>• The oven does not beep each time you press a button.</li> </ul>
©/52A	2. To switch the beeper back on, press the STOP/ECO and START/+30s buttons again at the same time.  Result:  The following indication is displayed.  The oven operates with the beeper on again.

# SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.

The oven can be locked at any time.

	Press the Child Lock button for three seconds.     Result:	
	<ul> <li>The oven is locked (no functions can be selected).</li> <li>The display shows "L".</li> </ul>	
•	To unlock the oven, press the <b>Child Lock</b> button for three seconds.     Result: The oven can be used normally.	

# cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave- safe	Comments
Aluminum foil	<b>√</b> X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
<ul> <li>Paper bags or newspaper</li> </ul>	Х	May catch fire.
Recycled paper or metal trims	Х	May cause arcing.

(continued)

English - 29

Cookware	Microwave- safe	Comments
Glassware		
Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
Fine glassware	<b>✓</b>	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
<ul> <li>Dishes</li> </ul>	Х	May cause arcing or fire.
<ul> <li>Freezer bag twist ties</li> </ul>	×	
Paper		
<ul> <li>Plates, cups, napkins and kitchen paper</li> </ul>	<b>✓</b>	For short cooking times and warming. Also to absorb excess moisture.
Recycled paper	Х	May cause arcing.
Plastic		
Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
Cling film	<b>✓</b>	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
Freezer bags	<b>√</b> X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease- proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓ x : Use Caution x : Unsafe

# cooking guide

### **MICROWAVES**

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

## COOKING

## Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency.
 Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

## Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

# Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

# Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

English - 30

# Cooking guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving Size	Power	Time (min.)		
Spinach	150 g	600 W	4½-5½		
	Instructions Add 15 ml (1 thsp) co	old water. Stand for 2-3	3 minutes.		
Broccoli	300 g	600 W	9-10		
	Instructions Add 30 ml (2 tbsp) co	old water. Stand for 2-3	3 minutes.		
Peas	300 g	600 W	7½-8½		
	Instructions Add 15 ml (1 tbsp) co	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.			
Green Beans	300 g 600 W 8-9				
	Instructions Add 30 ml (2 tbsp) cold water. Stand for 2-3 minutes.				
Mixed	300 g	600 W	7½-8½		
Vegetables (Carrots/Peas/ Corn)	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.				
Mixed	300 g	600 W	8-9		
Vegetables (Chinese Style)	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.				

# Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during

cooking. Cook covered.

After the cooking time is over, stir before standing time and salt or add

herbs and butter.

Remark: the rice may not have absorbed all water after the cooking time

is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir

well. Cook uncovered.

Stir occasionally during and after cooking. Cover during standing time

and drain thoroughly afterwards.

Food	Serving Size	Power	Time (min.)		
White Rice	250 g	800 W	16-17		
(Parboiled)	Instructions				
	Add 500 ml cold wat	ter. Stand for 5 minute	S.		
Brown Rice	250 g	800 W	21-22		
(Parboiled)	Instructions				
	Add 500 ml cold water. Stand for 5 minutes.				
Mixed Rice	250 g 800 W 17-18				
(Rice + Wild Rice)	Instructions				
	Add 500 ml cold wat	Add 500 ml cold water. Stand for 5 minutes.			
Mixed Corn	250 g	800 W	18-19		
(Rice + Grain)	Instructions				
	Add 400 ml cold water. Stand for 5 minutes.				
Pasta	250 g	800 W	11-12		
	Instructions Add 1000 ml hot water. Stand for 5 minutes.				

English - 31

# Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut,

Out the fresh vegetables into even sized pieces.	THE SITIALIE	шьу	ale (	Jui,
the quicker they will cook.				

Food	Serving Size	Power	Time (min.)	
Broccoli	250 g	800 W	4-41/2	
	500 g		7-71/2	
	Instructions			
		orets. Arrange the sten	ns to the centre.	
	Stand for 3 minutes.			
Brussels Sprouts	250 g	800 W	5½-6½	
	Instructions			
	Add 60-75 ml (4-5 tb	sp.) water. Stand for 3	minutes.	
Carrots	250 g	800 W	4½-5	
	Instructions			
	Cut carrots into even	sized slices. Stand for	3 minutes.	
Cauliflower	250 g	800 W	5-51/2	
	500 g 8½-9			
	Instructions			
	Prepare even sized flo	orets. Cut big florets in	to halves. Arrange	
	stems to the centre.	Stand for 3 minutes.		
Courgettes	250 g	800 W	31/2-4	
	Instructions			
	Cut courgettes into s	lices. Add 30 ml (2 tbs	p.) water or a knob	
	of butter. Cook until just tender. Stand for 3 minutes.			
Egg Plants	250 g 800 W 3½-4			
	Instructions	•		
		mall slices and sprinkle	with 1 tablespoon	
	lemon juice. Stand fo	r 3 minutes.		

Food	Serving Size	Power	Time (min.)	
Leeks	250 g	800 W	4½-5	
	Instructions			
	Cut leeks into thick s	lices. Stand for 3 minu	tes.	
Mushrooms	125 g	800 W	1½-2	
	250 g		3-3½	
	Instructions			
		or sliced mushrooms.	,	
		emon juice. Spice with	salt and pepper.	
	Drain before serving.			
Onions	250 g	800 W	5½-6	
	Instructions			
		or halves. Add only 1:	5 ml (1 tbsp.) water.	
	Stand for 3 minutes.		1	
Pepper	250 g 800 W 4½-5			
	Instructions			
	Cut pepper into smal	I slices. Stand for 3 mi	nutes.	
Potatoes	250 g	800 W	4-5	
	500 g		7½-8½	
	Instructions			
	Weigh the peeled potatoes and cut them into similar sized			
	halves or quarters. Stand for 3 minutes.			
Turnip Cabbage	250 g	800 W	5-5½	
	Instructions			
	Cut turnip cabbage into small cubes. Stand for 3 minutes.			

English - 32

### REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

### Arranging and covering

Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

### Power levels and stirring

Some foods can be reheated using  $800~\mathrm{W}$  power while others should be reheated using  $600~\mathrm{W}$ ,  $450~\mathrm{W}$  or even  $300~\mathrm{W}$ .

Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.

It is preferable to underestimate cooking time and add extra heating time, if necessary.

# Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken – for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out. The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

## **REHEATING LIQUIDS**

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

### Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)				
	150 ml (1 cup)	800 W	1-1½				
Drinks (Coffee,	250 ml (1 mug)	000 VV	1½-2				
Tea and Water)	. 0,	172-2					
		Instructions					
	· ·	Pour into cup and reheat uncovered. Put cup/ mug in the centre of turntable. Keep in microwave oven during standing time and					
	stir well. Stand for 1-	,	g starioning time and				
Soup (Chilled)	250 g	800 W	3-31/2				
Soup (Onlinea)	Instructions	000 VV	0 0/2				
		amic plate. Cover with	plactic lid. Stir well				
	· ·	gain before serving. St	•				
Stew (Chilled)	350 g	600 W	5½-6½				
Stew (Crimea)	Instructions	000 ٧٧	372-072				
		eramic plate. Cover wit	h plaatia lid. Ctir				
	· ·	eheating and again bef	'				
	serving. Stand for 2-3		ore starioling and				
Pasta with	350 g	600 W	4½-5½				
Sauce (Chilled)	Instructions	000 11	172 072				
oddoc (Orimod)		netti or egg noodles) or	a flat ceramic nlate				
	1 (010	e cling film. Stir before					
	3 minutes.	9					
Filled Pasta with	350 g	600 W	5-6				
Sauce (Chilled)	Instructions						
, ,	Put filled pasta (e.g. r	avioli, tortellini) in a dee	ep ceramic plate.				
	Cover with plastic lid. Stir occasionally during reheating and						
	again before standing and serving. Stand for 3 minutes.						
Plated Meal	350 g	51/2-61/2					
(Chilled)	Instructions		,				
	Plate a meal of 2-3 c	hilled components on a	a ceramic dish.				
	Cover with microwav	e cling-film. Stand for 3	3 minutes.				

English - 33

### REHEATING BABY FOOD

**BABY FOOD:** Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating!

Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40  $^{\circ}$ C.

**BABY MILK:** Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

## **REMARK:**

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

### Reheating baby food and milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving Size	Power	Time	
Baby Food	190 g	600 W	30 sec.	
(Vegetables +	Instructions			
Meat)	Empty into ceramic of	leep plate. Cook cover	ed. Stir after cooking	
	time. Before serving, carefully. Stand for 2	stir well and check the -3 minutes.	temperature	
Baby Porridge	190 g	600 W	20 sec.	
(Grain + Milk + Fruit)	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.			
Baby Milk	100 ml	300 W	30-40 sec.	
	200 ml		50 sec. to 1 min.	
	Instructions Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully. Stand for 2-3 minutes.			

### MANUAL DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected quests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Serving Size	Power	Time (min.)	
Meat				
Minced Beef	250 g 500 g	180 W	6½-7½ 10-12	
Pork Steaks	250 g	180 W	7½-8½	
	Instructions Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Stand for 5-25 minutes.			

English - 34

Food	Serving Size	Power	Time (min.)		
Poultry					
Chicken Pieces	500 g (2 pcs)	180 W	14½-15½		
Whole Chicken	900 g	180 W	28-30		
	Instructions First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Stand for 15-40 minutes.				
<b>Fish</b> Fish Fillets	250 g (2 pcs)	180 W	6-7		
	400 g (4 pcs)		12-13		
	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time! Stand for 5-15 minutes.				
Fruits	050	400 \\	0.7		
Berries	250 g	180 W	6-7		
	Instructions Distribute fruits on a flat, round glass dish (with a large diameter). Stand for 5-10 minutes.				
Bread					
Bread Rolls (Each about 50 g)	2 pcs 4 pcs	180 W	½-1 2-2½		
Toast/Sandwich	250 g	180 W	4½-5		
German Bread	500 g 180 W		8-10		
(Wheat + Rye Flour)	Instructions Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Stand for 5-20 minutes.				

### **GRILL**

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-4 minutes will make the food brown more quickly.

### Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

### Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

### Important remark:

Whenever the grill only mode is used, make sure that the grill-heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. Please remember that food must be placed on the high rack, unless another instruction is recommended.

### MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

### Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

## Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

# Important remark:

Whenever the combination mode (microwave + grill) is used, make sure that the grill heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. The food should be placed on the high rack, unless another instruction is recommended. Otherwise it has to be placed directly on the turntable. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

English - 35

### Grill Guide for frozen food

Use the power levels and times in this table as guide lines for grilling.

Frozen Food	Serving Size	Power	1 step (min.)	2 step (min.)
Bread Rolls		MW + Grill	300 W + Grill	Grill only
(Each ca. 50 g)	2 pcs		1-11/2	1-2
	4 pcs		2-21/2	1-2
			Grill the second s d for 2-5 minutes.	
Baguettes + Topping	250-300 g (2 pcs)	450 W + Grill	8-9	-
(Tomatoes, Cheese, Ham, Mushrooms)	Instructions Put 2 frozen ba Stand for 2-3 n	,	side on the rack. A	After grilling.
Gratin	400 g	450 W + Grill	13-14	-
(Vegetables or Potatoes)		,	und glass pyrex o tand for 2-3 minu	
Pasta	400 g	MW + Grill	300 W + Grill	Grill only
(Cannelloni,			18-19	1-2
Macaroni, Lasagne)			rectangular glass table. After grilling	
Chicken	250 g	450 W + Grill	5-51/2	3-31/2
Nuggets	Instructions Put chicken nuggets on the rack. Turn over after first time.			first time.
Oven Chips	250 g	450 W + Grill	9-11	4-5
	Instructions Put oven chips	evenly on baking	g paper on the rac	ck.

### Grill Guide for fresh food

Preheat the grill with the grill-function for 3-4 minutes.

Use the power levels and times in this table as guide lines for grilling.

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Toast Slices	4 pcs (each 25 g)	Grill only	6-8	4-5½
	Instructions Put the toast sl	ices side by side	on the rack.	
Bread Rolls	2-4 pieces	Grill only	2-3	2-3
(Already Baked)	Instructions Put bread rolls the turntable.	first with the bot	tom side up in a c	ircle directly on
Grilled		MW + Grill	300 W + Grill	Grill only
Tomatoes	200 g (2 pcs)		4½-5½	2-3
	400 g (4 pcs)		7-8	
			ome cheese on to Place it on the rac	
Toast Hawaii	2 pcs (300 g)	450 W + Grill	3½-4	-
(Ham, Pineapple, Cheese Slices)	Instructions Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.			
Baked Potatoes	250 g	600 W + Grill	4½-5½	-
	500 g		8-9	
	Instructions Cut potatoes into halves. Put them in a circle on the rack with th cut side to the grill.			the rack with the

English - 36

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Chicken Pieces	450-500 g (2 pcs)	300 W + Grill	10-12	12-13
	Instructions Prepare chicke with the bones centre of the ra			
Lamb Chops/	400 g (4 pcs)	Grill only	12-15	9-12
Beef Steaks (Medium)		chops with oil a grilling. Stand for	nd spices. Lay the 2-3 minutes.	em in a circle on
Pork Steaks		MW + Grill	300 W + Grill	Grill only
	250 g (2 pcs)		7-8	6-7
	Instructions Brush the pork steaks with oil and spices. Lay them in a circle or the rack. After grilling. Stand for 2-3 minutes.			
Baked Apples	1 apple (ca. 200 g)	300 W + Grill	4-4½	-
	2 apples (ca. 400 g)		6-7	
	Instructions Core the apple almond slices of the dish directly	. Put some lyrex dish. Place		
Roast Chicken		MW + Grill	450 W + Grill	300 W + Grill
	1200 g		22-24	23-25
	Instructions Brush chicken with oil and spices. Put chicken first breast side down, second breast side up on pyrex dish. Stand for 5 minutes after grilling.			

### **TIPS AND TRICKS**

#### MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 800 W, until butter is melted.

#### MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish.

Heat for 3-5 minutes, using 450 W until chocolate is melted.

Stir once or twice during melting. Use oven gloves while taking out!

### MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish.

Heat for 20-30 seconds using 300 W until honey is melted.

### MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.

Put drained gelatine into a small glass pyrex bowl.

Heat for 1 minute using 300 W.

Stir after melting.

### COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for  $3\frac{1}{2}$  to  $4\frac{1}{2}$  minutes using 800 W, until glaze/

icing is transparent. Stir twice during cooking.

#### COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well.

Cook covered for 10-12 minutes using 800 W.

Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

### COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for  $6\frac{1}{2}$  to  $7\frac{1}{2}$  minutes using 800 W.

Stir several times well during cooking.

### BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W.

Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

English - 37

# troubleshooting and error code

### **TROUBLESHOOTING**

If you have any of the problems listed below try the solutions given.

#### This is normal.

- Condensation inside the oven.
- · Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

### The oven does not start when you press the START/+30s button.

• Is the door completely closed?

#### The food is not cooked at all.

- Have you set the timer correctly and/or pressed the START/+30s button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

#### The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

# The light bulb is not working.

 The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

#### The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

# Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- · Is aluminum foil too close to the inside walls?

### Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.
  - To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.
- If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.

Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

# **ERROR CODE**

## "SE" message indicates.

 Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.

### "E-12" message indicates.

- The "E-12" message is Gas Sensor Short. This error may occur because of the high
  humidity in the cavity when you operate the microwave oven once again shortly
  after the previous operation of microwave oven for some food is finished. In this
  case, because there is a possibility that the Gas Sensor is not out of order turn off
  the microwave oven and try setting again. If this error occurs again, call your local
  SAMSUNG Customer Care Centre.
- For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

English - 38

# technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MG23H3125**	
Power source	230 V ~ 50 Hz	
Power consumption Microwave Grill Combined mode	1200 W 1100 W 2300 W	
Output power	100 W / 800 W (IEC-705) - 240 V : 800 W - 230 V : 750 W	
Operating frequency	2450 MHz	
Magnetron	OM75P(31)	
Cooling method	Cooling fan motor	
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 392 mm 330 x 211 x 324 mm	
Volume	23 liter	
Weight Net	13.5 kg approx	

# **MEMO**

English - 39



# QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT	
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com	
BELGIUM	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)	
DENMARK	70 70 19 70		
FINLAND	030-6227 515	www.samsung.com	
FRANCE	01 48 63 00 00	www.samsung.com/fr	
GERMANY	0180 6 SAMSUNG bzw. 0180 6 7267864* [HHP] 0180 6 M SAMSUNG bzw. 0180 6 67267864* (*0,20 €/Anruf aus dem dt. Festnetz, aus dem Mobilfunk max. 0,60 €/Anruf)	www.samsung.com	
ITALIA	800-SAMSUNG(726-7864) [HHP] 800.Msamsung (800.67267864)		
CYPRUS	8009 4000 only from landline		
GREECE	80111-SAMSUNG (80111 726 7864) only from land line (+30) 210 6897691 from mobile and land line	www.samsung.com/gr	
LUXEMBURG	261 03 710		
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)		
NORWAY	815 56480	www.samsung.com	
PORTUGAL	808 20-SAMSUNG(808 20 7267)	3	
SPAIN	902 - 1 - SAMSUNG (902 172 678)		
SWEDEN	0771 726 7864 (SAMSUNG)	1	
SWITZERLAND	0848 - SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch (German) www.samsung.com/ch_fr (French)	
U.K	0330 SAMSUNG (7267864)		
EIRE	0818 717100	www.samsung.com	

DE68-04240A-00